


## MEASUREMENT GUIDE

Figuring out what size replacement seal you need is easy. The best way to measure is using calipers or a ruler with 1/16 inch increments.

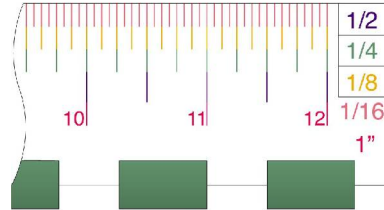

If you do not have access to a ruler or calipers you may print this sheet @ 100% so that the lines below can be used to measure the existing part by laying the part on the paper and matching the part to the closest dimension.

3/16"	1/4"	9/32"	5/16"	3/8"	7/16"
.187"	.250"	.270"	.3125"	.375"	.4375"
4.8 mm	6.4 mm	7.0 mm	8.0 mm	9.5 mm	11.0 mm

### TERMINOLOGY OF WEATHER STRIPPING PARTS

