


DOOR SWEEP INSTALLATION GUIDE

TOOLS REQUIRED:

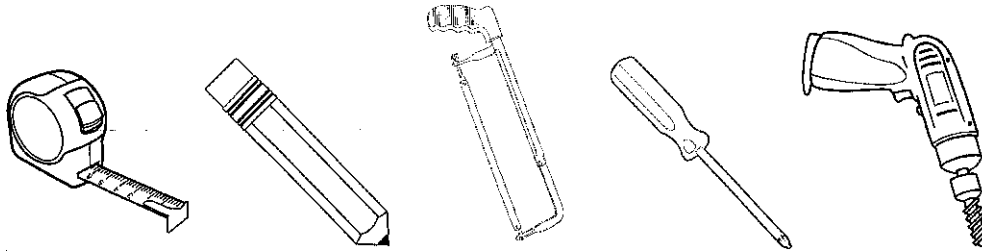

INSTALLATION INSTRUCTIONS:

Horizontal Sweep:

- 1. Measure the full width of the door bottom on the inswing side.**
- 2. If needed, mark and cut the door sweep to that length.**
- 3. Close the door and place the door sweep along the inswing side, bottom edge of the door so that the brush firmly touches the floor.**
- 4. Mark on the door in the center of each pre-punched slot.**
- 5. Drill small pilot holes at each mark.**
- 6. Secure door sweep to the door with supplied screws. Adjust the door sweep to ensure firm contact with the floor but do not over compress.**

Vertical Sweep:

- 1. Measure the full height of the door on the inswing, lock set side.**
- 2. If needed, mark and cut the door sweep to length.**
- 3. Close the door and place the door sweep along the edge of the inswing, lock set side. (This may take two people.) Door sweep brush should slightly overlap door frame.**
- 4. Mark on the door in the center of each pre-punched slot.**
- 5. Drill small pilot holes at each mark.**
- 6. Secure door sweep to the door with supplied screws. Adjust the door sweep to ensure even coverage from top to bottom.**